

Toyota 4A-GE repair manual

20v 'Blacktop'

- Chapter 1 - Preperation
- Chapter 2 - Service Specifications
- Chapter 3 - Charging
- Chapter 4 - Engine Mechanical
- Chapter 5 - Ignition
- Chapter 6 - Lubrication
- Chapter 7 - Cooling
- Chapter 8 - Electronic Fuel Injection
- Chapter 9 - Starting System