



Lotus Europa S1 Parts Manual - Section E6 - Engine - Pistons, Rods and Crank - Page 2

Item	Lotus #	S1	S1A/B	S2	S2 Fed	TC	TC Fed	TCS	TCS F	LHD	RHD	Description	Change Point Notes Bulletin Reference
46E6058	46E6058	1	1									Flywheel	
46E6059	46E6059	3	3									Dowel Pin	
46E6060	46E6060	5	5									Bolt - flywheel to cranksaft	
46E6061	46E6061	1	1									Lock Plate	
46E6062	46E6062	1	1									Bearing - Clutch spigot shaft	
46E6063	46E6063	1	1									Ring Gear - flywheel	
46E6064	46E6064	1	1									Crankshaft Seal (697-04) only	
46E6065	46E6065	4	4									Piston Ring - Top (697-04)	Up to Eng. No. 0198
46E6066	46E6066	4	4									Piston Ring - Centre (697-04)	
46E6067	46E6067	4	4									Piston Ring - Bottom (697-04)	
46E6068	46E6068	8	8									Bolt - Connecting Rod	
46E6069	46E6069	4	4									Connecting Rod (697-04) 433 grams	C=Green
46E6070	46E6070	8	8									Nut - Connecting Rod	
46E6071	46E6071	1	1									Crankshaft (694-04)	Up to Eng. No. 0066 Eng. No 0067 on use 046E6389
46E6072	46E6072	1	1									Sprocket	
46E6073	46E6073	1	1									Spacer - Sprocket Wheel	
46E6074	46E6074	1	1									Washer - Sprocket Wheel to Crankshaft	
8025120306	8025120306	1	1									Bolt - Sprocket Wheel to Crankshaft	
46E6075	46E6075	1	1									Woodruff Key - Sprocket Wheel to Crankshaft	From Eng. No. 2556 (697-04)