



Lotus Europa S1 Parts Manual - Section J3 - Brakes - Bundy Pipes and Fittings - Page 2

Item	Lotus #	S1	S1A/B	S2	S2 Fed	TC	TC Fed	TCS	TCS F	LHD	RHD	Description	Change Point Notes Bulletin Reference
46J2001(D)	46J2001(D)	1	1									Mounting Bracket - Flexible Hose RH	
46J6016	46J6016	2	2									Flexible Hose - Front	
46J6036	46J6036	1	1									Bundy Pipe - Union to Flexible Hose RH	
46J6017	46J6017	1	1									Union - Front 4 way	Attaches with 7/16 head, 1/4" x 28 TPI, 1" long bolt, & 1/4" x 28 TPI Nyloc nut
46J6033	46J6033	1	1									Bundy Pipe - Master Cylinder to 4 Way Union	
46J6035	46J6035	1	1									Bundy Pipe - Union to Flexible Hose LH	
46J6041	46J6041	1	1									Cap - Reservoir	
46J6019	46J6019	1	1									Reservoir	
46J6032	46J6032	1	1									Bundy Pipe - Reservoir to Master Cylinder	
46J6015	46J6015	1	1									Repair Kit - Master Cylinder	
46J6018	46J6018	1	1									Master Cylinder	
46J6020	46J6020	2	2									Flexible Hose - Rear	
46J6037	46J6037	1	1									Bundy Pipe - Front Union to Rear Union	
46J068	46J068	1	1									Handbrake Cable - Intermediate	
46J704	46J704	1	1									Multiplier	
46J067	46J067	1	1									Handbrake Cable - Lever to Multiplier	
46J019	46J019	1	1									Pedal Assembly	
46J084	46J084	1	1									Clevis Pin	
46J076	46J076	1	1									Clevis	
46J036	46J036	1	1									Push Rod	
46J075	46J075	1	1									Adaptor - Push Rod to Clevis	
A46J075	A46J075	1	1									Adaptor - Push Rod to Clevis	
46J6025	46J6025	1	1									Stop Lamp Switch	
46J6045	46J6045	1	1									Bundy Pipe - Union to Flexible Hose Rear - RH	
46J6042	46J6042	2	2									Bundy Pipe - Flexible Hose to Rear Brake	
46J016	46J016	1	1									Return Spring	
46J6043	46J6043	1	1									Bundy Pipe - Union to Flexible Hose Rear - LH	
46J069	46J069	1	1									Handbrake Cable - rear	
46J6044	46J6044	2	2									Bundy Pipe - Flexible Hose to Caliper	
46J2000(G)	46J2000(G)	1	1									Bracket - LH	