



Lotus Europa S1 Parts Manual - Section P1 - Heater - Heater and Ventilation - Page 2

Item	Lotus #	S1	S1A/B	S2	S2 Fed	TC	TC Fed	TCS	TCS F	LHD	RHD	Description	Change Point Notes Bulletin Reference
46P6006	46P6006	2	2									Hose - Face Level Vent	
46P6009	46P6009	2	2									Hose - Heater to Demist Nozzle	Up to Chassis No. 1456
LUFN100F	LUFN100F	3	3									Nut - Heater Fan Mounting	
H03W0905	H03W0905	3	3									Washer - Heater Fan Mounting	
XUFS1012	XUFS1012	3	3									Bolt - Heater Fan Mounting	
46M6195	46M6195	1	1									Heater Motor	
46P6000	46P6000	1	1									Heater Fan Motor	
46P6002	46P6002	1	1									Heater Unit	
46P032	46P032	2	2									Tube - Face Level Vent Connection	
46P005	46P005	1	1									Hose - Heater Control Valve to Transfer	
W0089	W0089	1	1									Nipple - Heater Cable to Control Valve	
46B037	46B037	1	1									Heater Cable	
46P6005	46P6005	1	1									Heater Control Valve	
46P022	46P022	2	2									Hose	
RSTS0812	RSTS0812	1	1									Screw - Cable Clip - Heater Cable Fixing	
46P6007	46P6007	1	1									Cable Clip - Heater Cable Fixing	
46P6011	46P6011	8	8									Clip - Hose	
46P6001	46P6001	2	2									Demist Nozzle	
46P6010	46P6010	4	4									Clip - Demist Nozzle Hose	
DSTS0612	DSTS0612	4	4									Screw - Demist Nozzle	
46P6091	46P6091	4	4									Nut - Demist Nozzle	
46P030	46P030	2	2									Face Level Vent	